COWL TOP SIDE PANEL (ASSY)

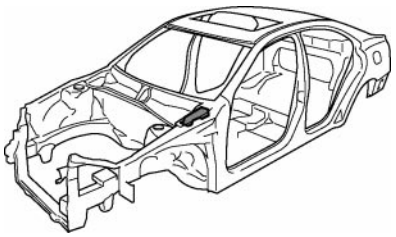

F25886A

With the cowl top side reinforcement removed.

Symbol meaning

REMOVAL	: Remove Weld Points
INSTALLATION	: MIG Plug Weld

F25886B

REMOVAL·INSTALLATION

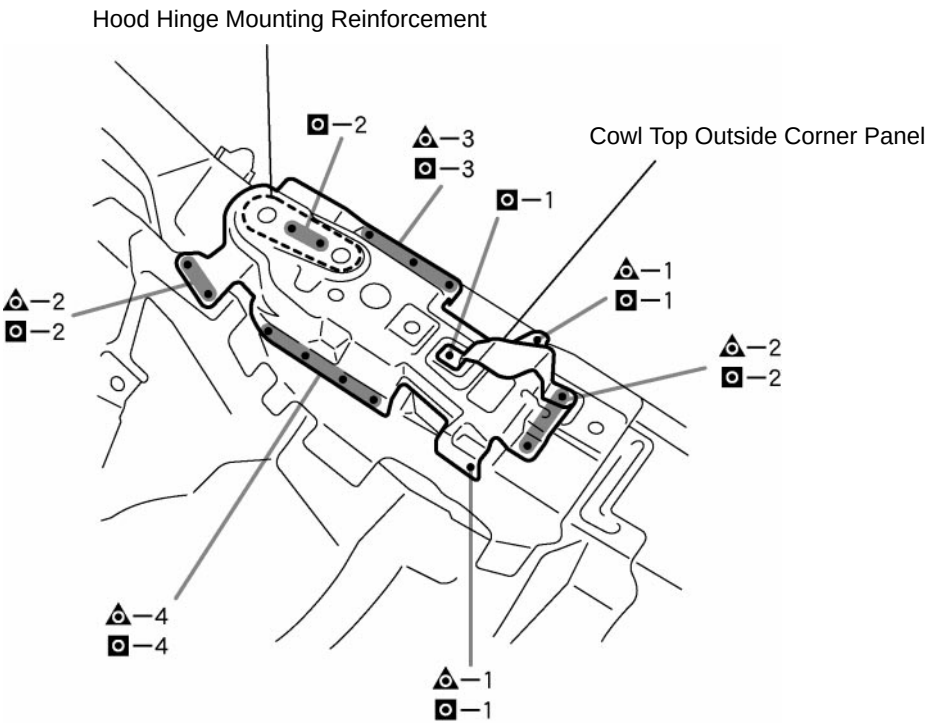

F25886

REMOVAL POINT

1 Remove the cowl top outside corner panel at the same time.

INSTALLATION POINT

1 Before temporarily installing the new parts, weld the hood hinge mounting reinforcement with the standard number of welding points.
2 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.